







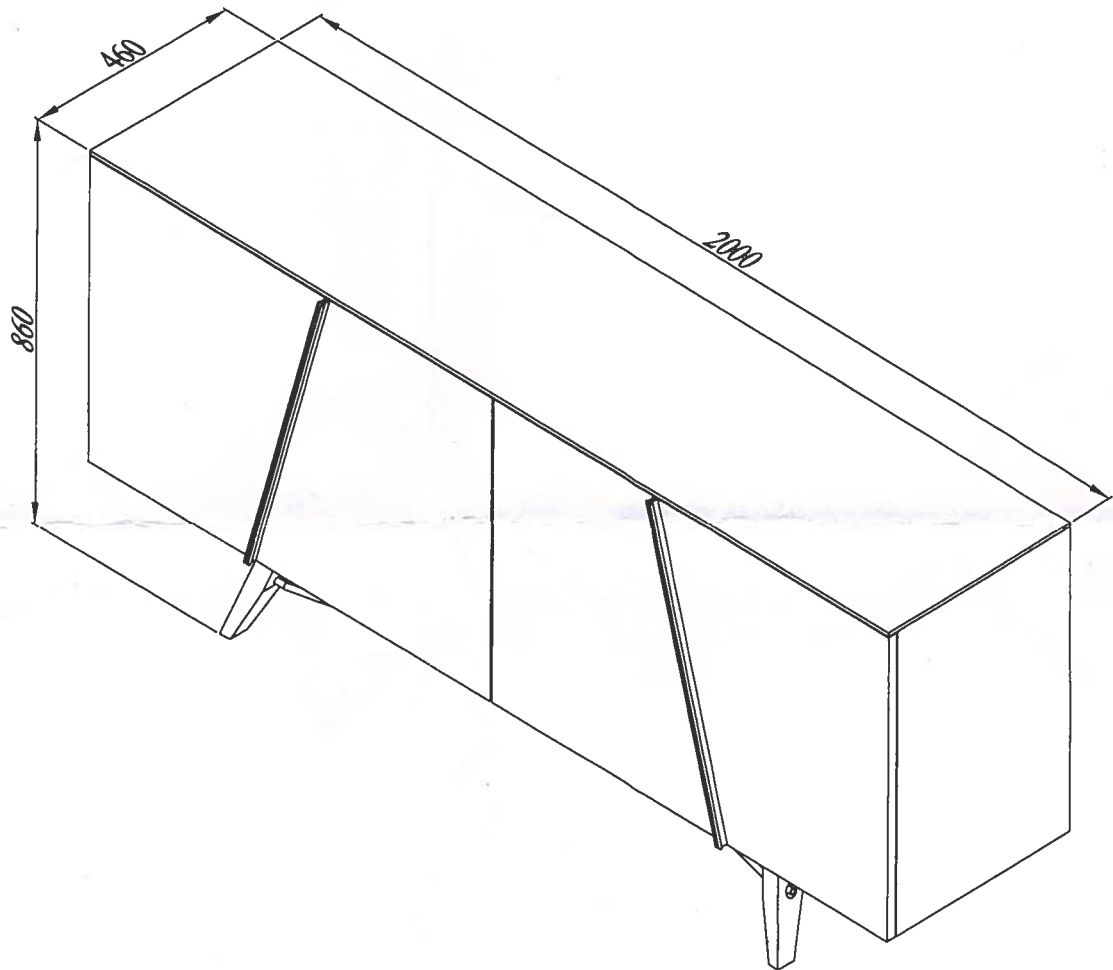



ASSEMBLY INSTRUCTION


82049 - RIMINI SIDEBORD








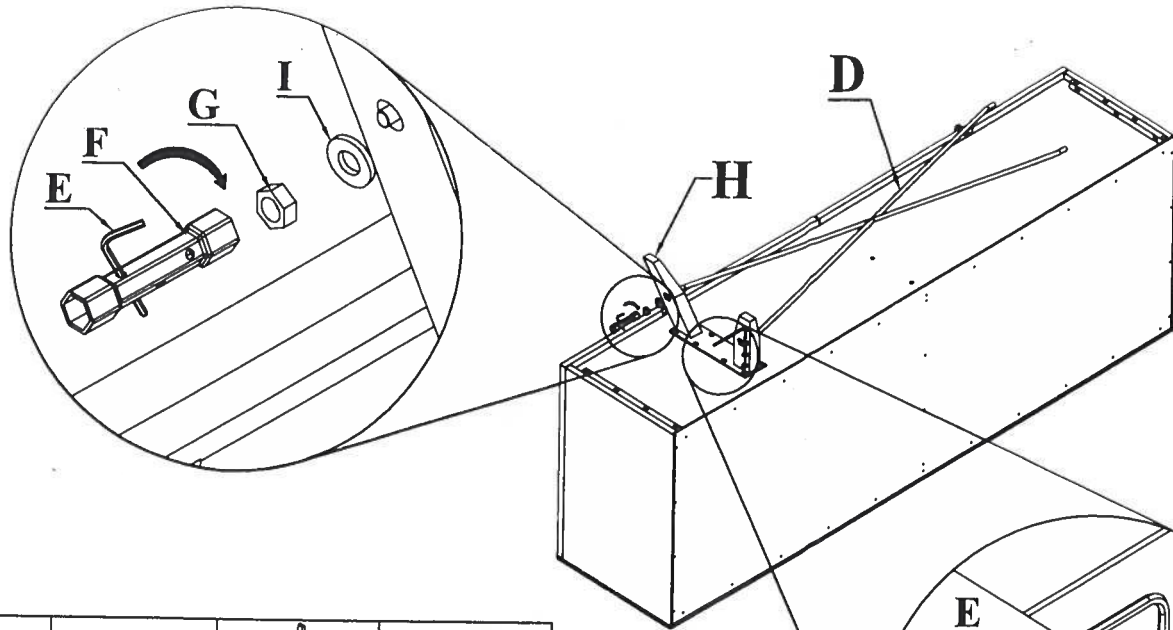

KARE
DESIGN




 Fx1	 G x 4 M12	 H x 2 80x425x245	 I x 4 Ø12.4x20x1.6	
	 R x 16	 C x 16		


STEP 1



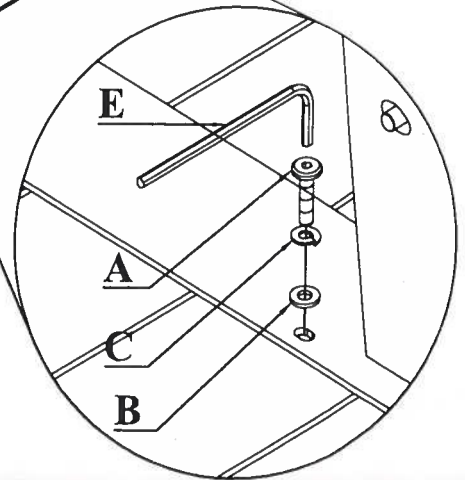



				
F x 1	G x 2 M12	H x 1 80x425x245	I x 2 Ø12.4x20x1.6	
				
A x 8 M8x20	B x 8 Ø8.4x18x1.6	C x 8 Ø8x13x1.6	D x 1 12x607x1396	E x 1 M4x110

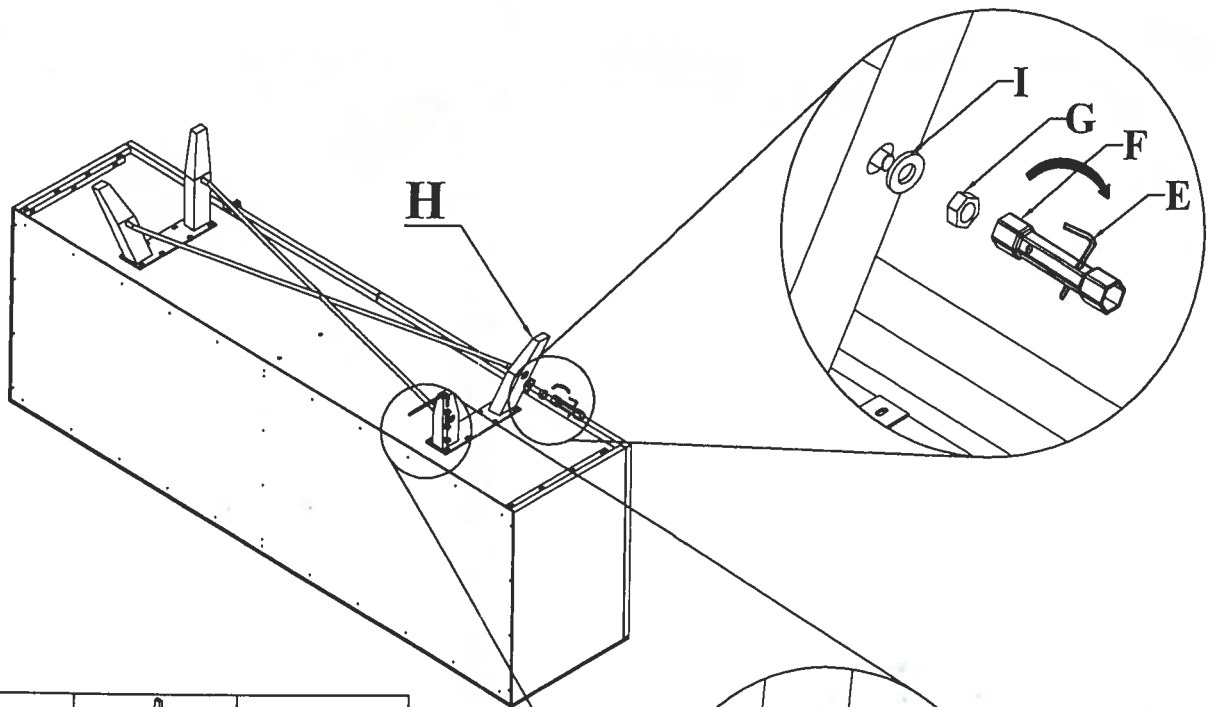

STEP 2



			
F x 1	G x 2 M12	H x 1 80x425x245	I x 2 Ø12.4x20x1.6
